tor help This equipment has been tested and found to comply with Cousnit the dealer of an experienced radio/ I v technician NOTE: Class B Devices Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Operation is subject to the following two conditions: (1) this device must accept any interference received, including interference that may cause undestied operation. Increase the separation between the equipment and receiver MINELAE Reorient or relocate the receiving antenna THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. the interference by one or more of the following measures: Intormation to the User (FCC Part 15.105) equipment off and on, the user is encouraged to try to correct This equipment generates, uses and can radiate radio indevency periods and, find translated and used in accontance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that relevation rectation, which can be determined by turning the relevation rectation, which can be determined by turning the relevation rectation. which can be determined to the correct relevation rectation. When the many COMPLIANCE əpinə This product has a 6 month limited warranty from the time of purchase. Please refer to minelab.com/warranty-conditions for full warranty terms and conditions. Started паам **SMABT YTNAAAAW** buitted DINOS-020 zo 8.5 \ p 011 20 8.0 \ p £2 **Weight** "68.0 × "44.2 × "65.4 əzis աաշշ × աաշ໑ × աա60լ ۵۵۲ × ۵۵۲ × ۵۵۲ ۲ sigval 7 Juamizulas adjustment sm 02> Aesponse time ZHY [@%[> Audio distortion Audio amplifier power ΜE mab8+ - 0 RF transmission power mətey2 oibuA zeələriW lezrəvinU sled UUI s/ep ng Stand-by time Operating time sinon of sinon 01 ≤ I U metres / 32 feet vvireiess range - 022 2.402 - 2.480 Ghz Radio frequency range Fransmit Module Seceive Module snoitestions 2 0 0

The PRO-SONIC wireless audio system generates audio using advanced wireless technology to achieve clear sound with minimal perceivable time delay.

The PRO-SONIC Receive Module features an internal loudspeaker and a 6.35mm (1/4") headphone socket for use with your choice of headphones. It can be attached to your harness or clothing using the metal belt clip.

Wireless Technology

The PRO-SONIC Transmit Module sends out low-power (mW) radio waves using the ISM frequency band (2.402 - 2.480 Ghz).

The PRO-SONIC Receive Module senses these signals and establishes a piconet communication network with the Transmit Module, using frequency hopping to eliminate interference from other wireless devices.

WIRELESS LINK TRANSMIT RECEIVE ,,,,,,,,,,,,,,,,, 2.4 GHz, 1 mW Piconet frequency hopping network 5

PRO-SONIC List of Parts



o-sonic M

Transmit Module

0 0

0 N

Universal Charger

AC and Car Charger

П







Dual Charging Cable 1 × USB-A, 2 × USB Micro-B

Compatible with Any Detector PRO-SONIC is compatible with all popular Minelab detectors, and is supplied with an SDC 2300 adaptor cable.



SDC 2300

Adapter Cable





Warning: Any changes or modifications not expressively approved by Minelab Electronics could void the user's authority to operate this equipment.

05181040591+ North, South & Central America


moɔ.ɛɛɔirəmɛdɛlənim@ofni 🖂

5666 757 7 126+ 🔪 Middle East & Africa

əɛ.dɛlənim@dɛlənim 🖂

N3-2-9120-106t



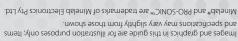

əi.delənim@delənim 🖂

us.moz.dslənim@dslənim 🖂

protection against harmful interference in a residential installation.

FCC Rules. These limits are designed to provide reasonable the limits for a Class B digital device, pursuant to part 15 of the

1323 21 423 2322

8880 88738 19 + 🤊

Australia & Asia Pacific

Europe & Russia






INGOM

DYC

PRO-SONIC Operation

To use PRO-SONIC with your detector, follow the easy steps below. You'll be enjoying the freedom of wireless audio in no time!

NOTE: The Transmit and Receive Modules have an operating range of 10 metres / 32 feet.

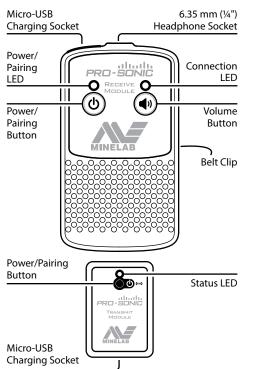

WARNING: PRO-SONIC Transmit and /!\ Receive Modules ARE NOT WATERPROOF. Do not immerse in any liquid or allow water ingress.

Volume Adjustment

Increasing the Volume

A short press of the Volume button (will increase the volume by one level. With each short press, a double beep will be heard at the new volume level.

When maximum volume is reached, you will hear a high pitch double beep.

Decreasing the Volume

A long press of the Volume button () will decrease the volume by one level. With each long press, a double beep will be heard at the new volume level.

When minimum volume is reached, you will hear a low pitch double beep.

NOTE: The volume can only be adjusted when the Modules are connected.

Turning the Modules Off

1. Press and hold the Transmit Module Power/ Pairing button until the Charging/Connection LED flashes pink once before turning off.

2. Press and hold the Power/Pairing button () on the Receive Module. There will be a series of low beeps and both the red and blue LEDs will illuminate before turning off.

Low Battery Warning

When the Receive Module battery level is low, the

First-Use Pairing

The PRO-SONIC Transmit and Receive Modules must be wirelessly synchronised (paired) before they can be connected to your detector.

NOTE: The pairing process is only necessary at first time use. Once the PRO-SONIC Modules have been successfully paired, this step can be skipped for all future uses.

1. Press and hold the Receive Module Power/ Pairing button () until the Power/Pairing LED (red) and the Connection LED (blue) are illuminated simultaneously, and keep holding until both LEDs begin to flash alternately.

2. Press and hold the Transmit Module Power/ Pairing button until the Status LED illuminates pink, and keep holding until it begins to flash red and blue alternately.

3. The Modules will pair automatically. When pairing is successful, the Status/Connection LEDs on the Modules will flash blue slowly.

If pairing/connecting is unsuccessful, try the following:

1. Move away from potential sources of interference. Turn off both Modules before attempting to pair again at a different location.

Unpairing the Modules

1. Make sure both Modules are turned off.

Power/Pairing LED will flash red and a warning beep will emit.

When the Transmit Module battery level is low, the Power/Pairing LED (blue) will reduce in brightness.

When the battery level on either Module is critically low, the Module will automatically turn off.

Battery Charging

The PRO-SONIC Receive and Transmit Modules contain rechargeable Li-Ion batteries. These can be charged via the supplied Universal Charger or a standard USB port/charger.



NOTE: Batteries can become damaged if left idle for long periods of time.

Fully charge the Receive and Transmit Modules once every 3–4 months if the units have not been charged in this period.

Connecting the AC or Car Charger

1. Connect the Universal Charger to a standard AC wall outlet, or plug the Car Charger into your vehicle's charging socket.

2. Connect the Dual Charging Cable to the Universal Charger or the Car Charger. You are now ready to connect the Receive or Transmit Modules.

Alternatively, directly connect the Dual Charging Cable to any standard USB port/charger.

Connecting PRO-SONIC

1. Press and hold the Receive Module Power/ Pairing button () until the Power/Pairing LED (red) and the Connection LED (blue) are illuminated simultaneously, and keep holding until the Power/ Pairing LED begins to flash red intermittently.

2. Press and hold the Power/Pairing button • Om the Transmit Module until the Status LED illuminates pink, and keep holding until the LED begins to flash red intermittently.

3. The Modules will connect automatically. When connection is successful, the Status/Connection LEDs on the Receive and Transmit Modules will flash blue slowly.

4. Connect the Transmit Module to the audio input on your detector with the Transmit Module Audio Cable. If you are using an SDC 2300, connect using the SDC 2300 Adapter Cable provided.

2. Turn off other nearby wireless devices that may be trying to pair with the PRO-SONIC. (e.g. Computers, televisions, wireless networks)

2. Hold the Power/Pairing button on the Transmit Module for more than 5 seconds, then turn it off. The Modules will now be unpaired.

Charging the Transmit Module

1. Connect a USB Micro-B connector on the Dual Charging Cable to the charging socket at the bottom of the Transmit Module. The Status LED will illuminate red

2. When the Module is fully charged, the LED will change to blue and remain on until the Module is disconnected from the Charger.

Charging the Receive Module

1. Connect a USB Micro-B connector on the Dual Charging Cable to the charging socket at the top of the Receive Module. The Power/Pairing LED (red) will illuminate.

2. When the Module has fully charged, the Connection LED (blue) will illuminate and remain on until the Module is disconnected from the Charger.

Connecting Headphones

To use headphones with PRO-SONIC, plug the headphone connector into the PRO-SONIC headphone socket.



TIP: Attach the PRO-SONIC Receive Module to the same

side of your body as the Transmit Module using the belt clip, for the most reliable wireless signal.



Download this guide in the following languages at www.minelab.com:

English | Español | Português | русский